

Contents:


Lock Assembly, 2 keys
 Mounting Insert
 6 MM Hex Bolt
 6-32 Flat Head Screw
 Instructions, Warranty Card

Tools Required:

10 and 13 MM Socket
 Phillips Head Screw Driver


Tech Support:

Call 1-800-342-5911

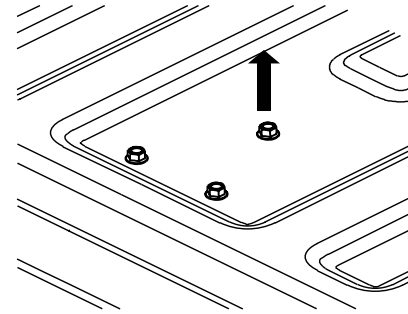


1. Lower the tailgate and remove the center 8 MM mounting bolt holding the handle and bezel.

Loosen the other two bolts 3/8" to 1/2".

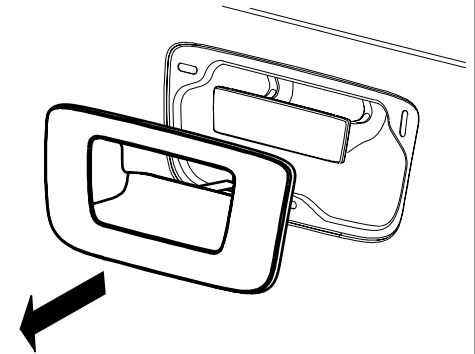


2. Close the tailgate and carefully pull the bezel away from the tailgate working against the three spring clips.

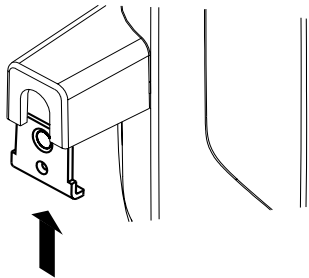


3. Turn the bezel around and pull the metal attachment plate out of the mounting boss.

Push the supplied mounting insert into its place as shown, until the two ears are seated.

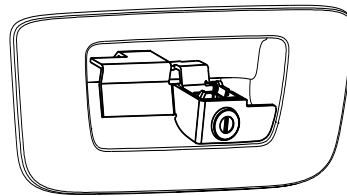


4. Place the POP&LOCK into the lower right hand corner of the bezel.

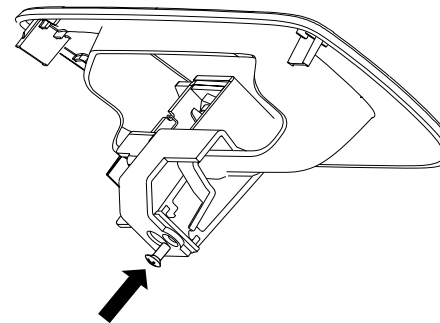

5. Turn the bezel around and insert the 6-32 screw as shown. Tighten it to secure the POP&LOCK in place making sure that it fits tightly in the corner of the bezel.

Do not over tighten the 6-32 screw.

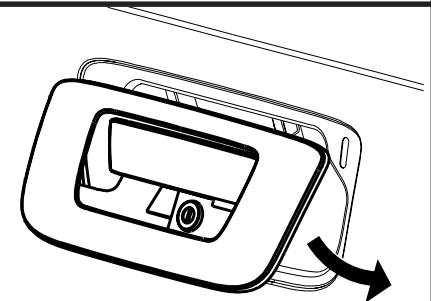

6. Tilt the bezel down, pull the handle as far as it will go out of the tailgate and slide the bezel over it. Push the bezel in until the spring clips snap into the tailgate. Insert the supplied 6 MM bolt in the central mounting hole and tighten, then tighten the two 8 MM mounting bolts, making sure that the handle is straight.

Test the lock for smooth operation.