

Contents:

Lock Assembly, 2 keys
2 1/4-20 One-Way Screws
Instructions, Warranty Card

Tools Required:


Screw Driver

Tech Support:

Call 1-800-342-5911


This POP&LOCK mounts on the inside of the tailgate.

NOTE: If your truck has a bedliner, you must drill an access hole in it for the lock using a 1" Dia Hole Saw.

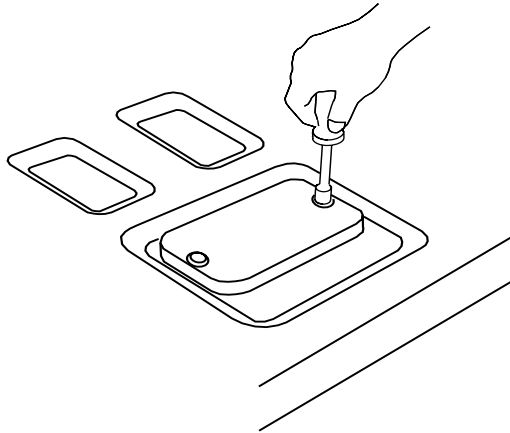

1.

Lower the tailgate. Remove the bedliner. Remove the Access Panel.

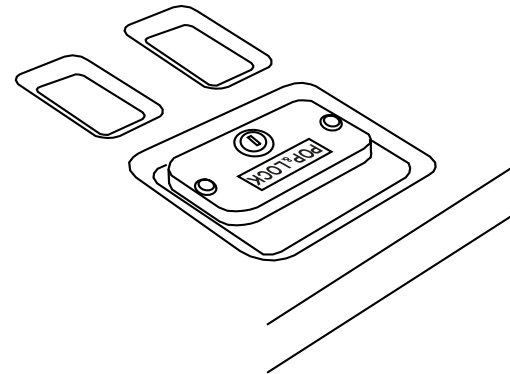

2.

Replace the Access Panel with the POP&LOCK.